




# Accessing your fryer's ENERGY SAVER (IDLE) MODE SETTINGS



Turn on Energy Saver (Idle) Mode with just a few simple steps.

- 1 First, **press and hold** the  and  buttons until the display reads "**LEVEL 3**" programming.
- 2 Enter the following password: "**11221122**"
- 3 Use the ▼ or ▲ to navigate to "**B. SPEC PROG**" (Special Programming) and **press** the  to confirm.
- 4 Use the ▼ button to access "**SP-58 IDLE MODE**".
- 5 In **SP-58**, use the ◀ or ▶ to change "**NO**" to "**YES**".
- 6 In **SP-59**, "**0 YES or NO**" (if YES is selected, "**0**" button on controller will activate Energy Saver [Idle] Mode when pressed).
- 7 In **SP-60**, the default idle **time setting** is **30 minutes** (Auto Idle Minutes allows you to adjust this setting to any desired time limit).
- 8 In **SP-61**, the default idle mode **set point temperature** is **200°F** (the fryer will automatically drop the oil temperature down to the set point when the vat is idle).

## OFF DEFAULT SETTINGS WHEN ENERGY SAVER MODE OFF

SP-58 Idle Mode "**NO**"

SP-59 Set "**0 NO**"

SP-60 Auto Idle Minutes:  
**30 Minutes**

SP-61 Idle Mode Set Point:  
**IDLE 200°F**

## ON DEFAULT SETTINGS WHEN ENERGY SAVER MODE ON

SP-58 Idle Mode "**YES**"

SP-59 Set "**0 YES or NO**"  
(additional option)

SP-60 Auto Idle Minutes:  
**30 Minutes** (set limit before  
fryer goes into idle mode)

SP-61 Idle Mode Set Point:  
**200°F**

Visit [www.lovsavings.com](http://www.lovsavings.com) to learn more about Energy Saver Mode and other LOV benefits.

**HENNY PENNY**  
Engineered to Last